

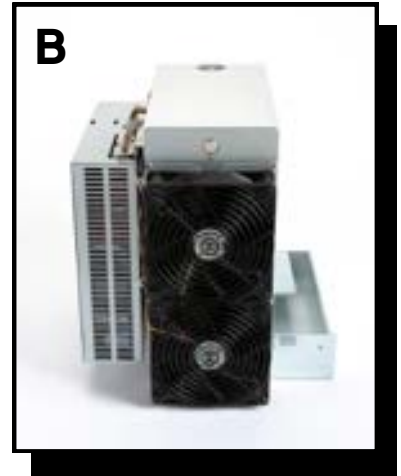



1 First, remove the cover over the power supply by removing the screws as shown in Figure A, then sliding the cover towards the back of the miner to lift and remove as shown in Figure B.

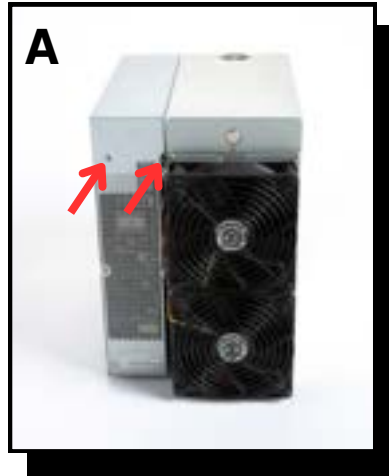

2 Remove the power cable, data cable, and bus bar screws as shown in Figure C. There is one more screw holding the power supply on the chassis as shown with the red arrow in Figure D.

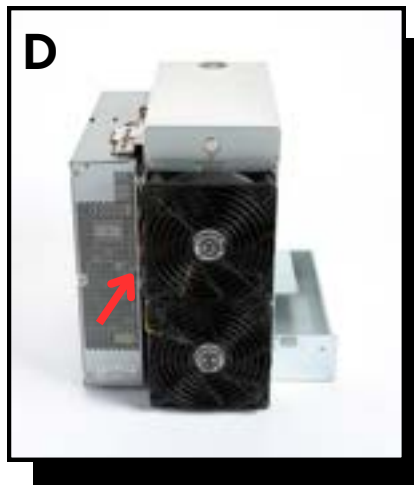

3 Slide the old power supply off the chassis, as shown in Figure E.

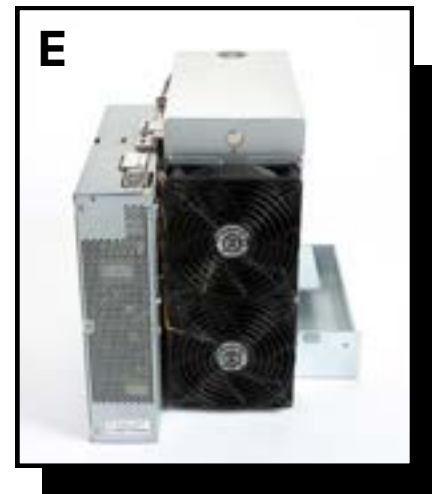

Continue to next page 

- 4** Finally, follow the above instructions in reverse:
- slide your new power supply into place (Figure F),
 - attach the cables and reattach the bus bar with screws (Figure G), and
 - replace the power supply cover (Figure H).



Your Foundry Power Supply is now installed!

It is also worth noting that the PSU cover will now have a slight overhang due to our new smaller, more efficient power supply design. This is normal and will not impact the rig in any way.

If you have any questions, please contact us at sales@foundrydigital.com.

Disclaimer

Foundry shall in no way be liable for any losses, damages or costs of any kind, including but not limited to direct or indirect, consequential, incidental or other costs or damages as a result of relying on this information.